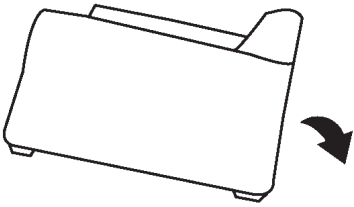
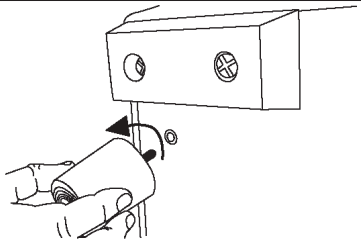
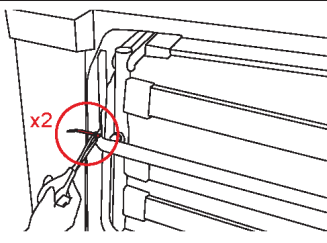
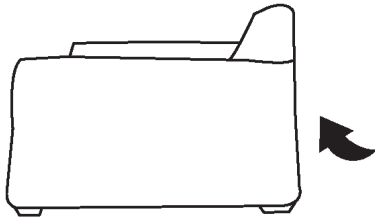
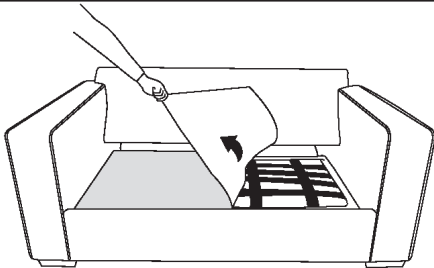
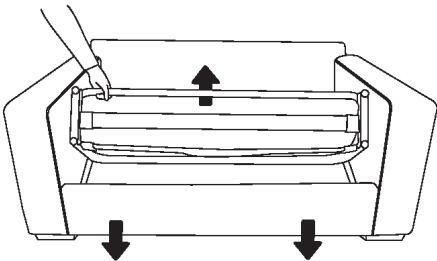
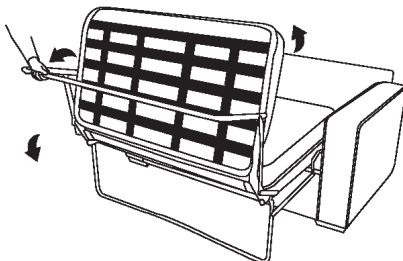
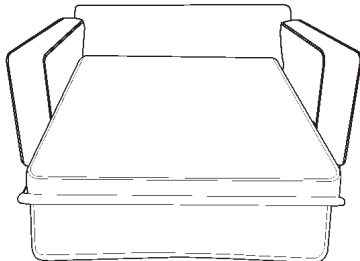
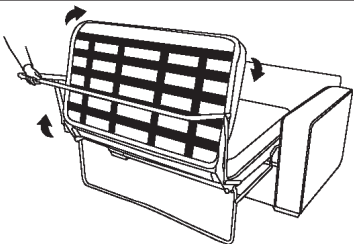
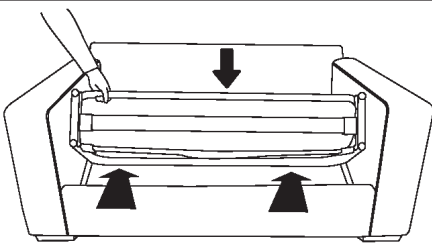
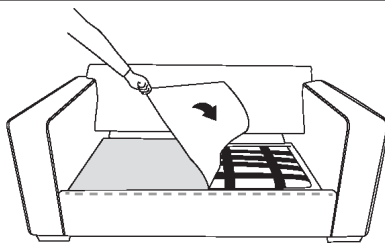
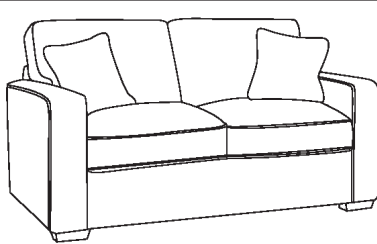





SOFA BED INSTALLATION AND OPERATING INSTRUCTIONS

FURNITURE IS HEAVY, MOVING OR LIFTING SHOULD NOT BE ATTEMPTED ON YOUR OWN

			
<p>1. CAREFULLY PLACE THE SOFA ON ITS BACK.</p>	<p>2. REMOVE THE TRAVEL GUIDES NEXT TO THE FRONT FEET.</p>	<p>3. CUT THE ZIP TIES ON BOTH SIDES WHICH ARE PREVENTING THE MECHANISM OPEN.</p>	<p>4. PUT THE SOFA BACK IN AN UPRIGHT POSITION.</p>
			
<p>5. REMOVE THE VELCO PLATFORM PAD.</p>	<p>6. PULL OUT SOFA BED MECHANISM USING A 'LIFT & PULL' MOTION.</p>	<p>7. UNFOLD THE BED AND LEG TOWARDS THE FRONT UNTIL THE LEG IS ON THE FLOOR.</p>	<p>8. REMOVE PLASTIC WRAPPING FROM THE MATTRESS AND PLACE IT ON THE BED.</p>
			
<p>9. CLOSE THE BED MECHANISM BY REVERSING STEP 7.</p>	<p>10. LIFT AND PUSH THE BED MECHANISM BACK INTO THE SOFA.</p>	<p>11. COVER THE BED MECHANISM WITH THE VELCO PLATFORM PAD.</p>	<p>12. PLACE BACK, SEAT & SCATTER CUSHIONS.</p>

PLEASE NOTE, IF YOU HAVE A WOODEN OR LAMINATE FLOOR, WE WOULD ADVISE YOU TO TAKE STEPS TO PROTECT YOUR FLOOR FROM POTENTIAL SCRATCHES AND MARKS. THE EASIEST WAY IS TO PLACE PROTECTIVE PADS UNDER THE FEET OF YOUR UPHOLSTERED FURNITURE TO PREVENT MARKS BEING MADE, OR PLACE THE UPHOLSTERED FURNITURE ON TOP OF A PROTECTIVE COVER SUCH AS A RUG. THE MANUFACTURER CANNOT BE HELD RESPONSIBLE FOR DAMAGE SUBSEQUENTLY CAUSED TO YOUR FLOORING BY NOT TAKING THE PREVENTATIVE MEASURES.

<h1>TRAVEL GLIDE REMOVAL INSTRUCTIONS</h1>	<p>FURNITURE IS HEAVY, MOVING OR LIFTING SHOULD NOT BE ATTEMPTED ON YOUR OWN</p>
--	--

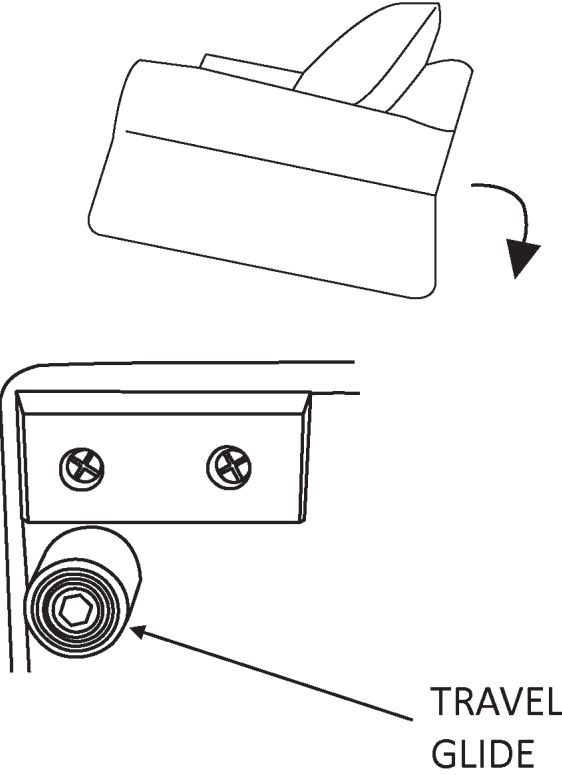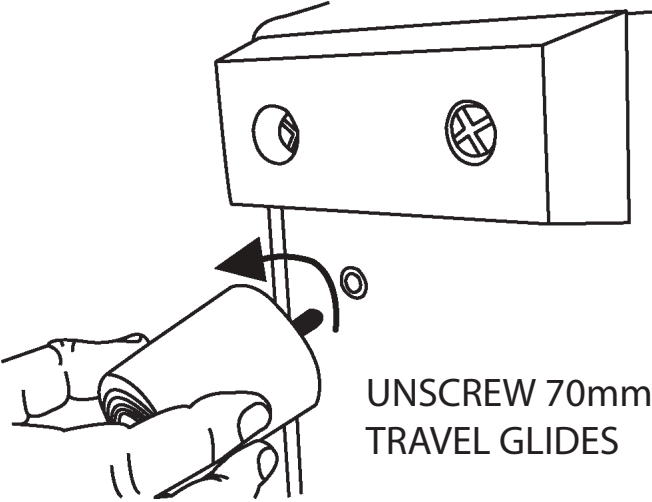 <p>TRAVEL GLIDE</p>	 <p>UNSCREW 70mm TRAVEL GLIDES</p>	 <p>DO NOT REMOVE THE PERMANENT FEET AT THE REAR</p>
<p>1. Gently turn your product onto its back. Locate the travel glides directly behind the wooden feet, only these glides should be removed.</p>	<p>2. Unscrew the 70mm travel glides by turning anti-clockwise and remove.</p>	<p>3. Be sure to leave the other smaller, hidden glides at the rear, as these are used as feet. Remove only the travel glides located next to the wooden feet.</p>


PLEASE NOTE, IF YOU HAVE A WOODEN OR LAMINATE FLOOR, WE WOULD ADVISE YOU TO TAKE STEPS TO PROTECT YOUR FLOOR FROM POTENTIAL SCRATCHES AND MARKS. THE EASIEST WAY IS TO PLACE PROTECTIVE PADS UNDER THE FEET OF YOUR UPHOLSTERED FURNITURE TO PREVENT MARKS BEING MADE, OR PLACE THE UPHOLSTERED FURNITURE ON TOP OF A PROTECTIVE COVER SUCH AS A RUG. THE MANUFACTURER CANNOT BE HELD RESPONSIBLE FOR DAMAGE SUBSEQUENTLY CAUSED TO YOUR FLOORING BY NOT TAKING THE PREVENTATIVE MEASURES.

TRAVEL GLIDE REMOVAL INSTRUCTIONS


PERMANENT GLIDES & TRAVEL GLIDES

FURNITURE IS HEAVY, MOVING OR LIFTING
SHOULD NOT BE ATTEMPTED ON YOUR OWN


- **KEEP HIDDEN GLIDES
(THESE ARE TO SERVE AS FEET)**

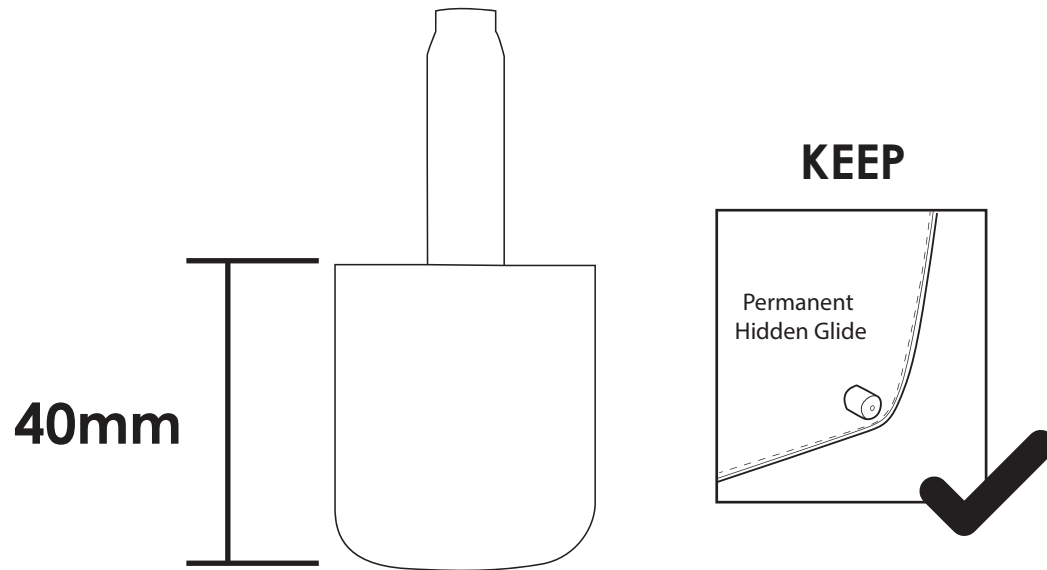


- **REMOVE ALL TRAVEL GLIDES**

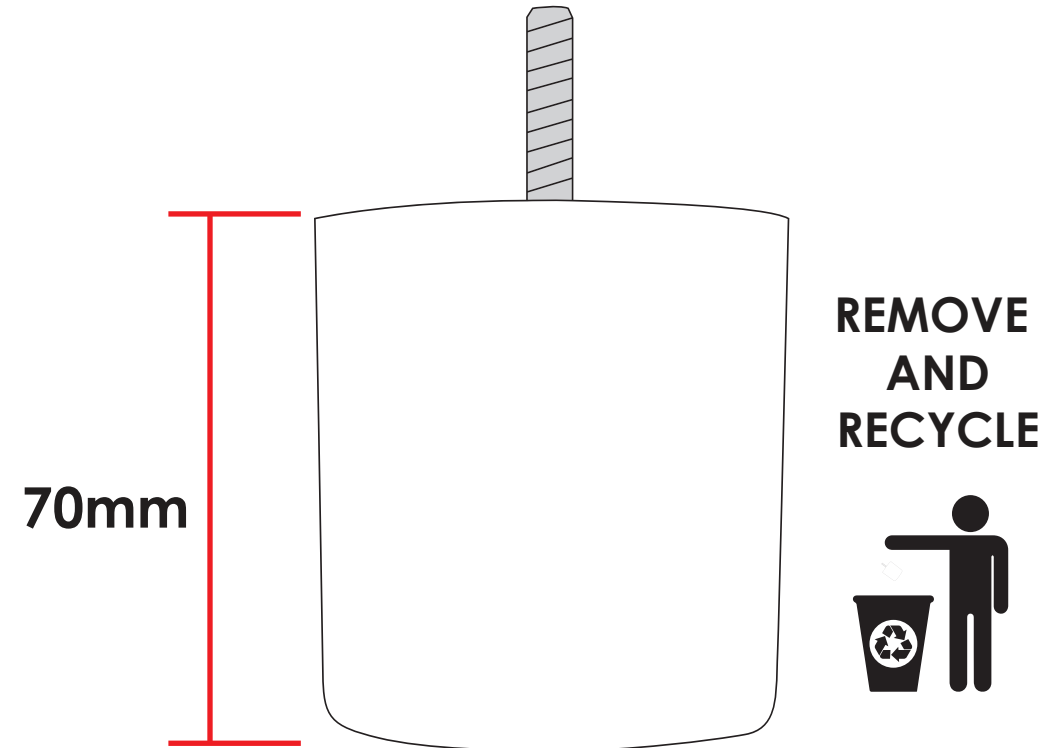

**Example of 3
Seater Sofa with
fitted front feet.**

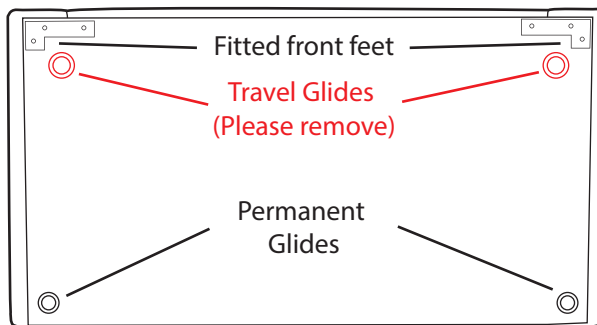

**Example of 3 Seater
Sofa with fitted front
and back feet.**

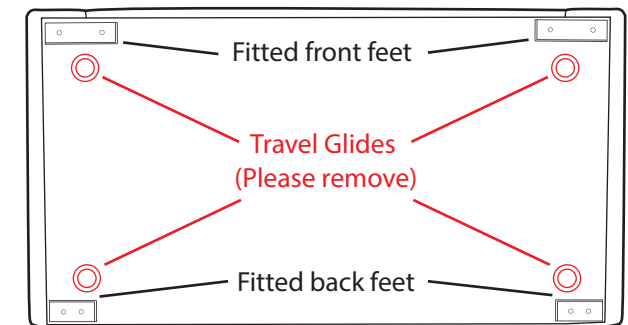

PLEASE NOTE, IF YOU HAVE A WOODEN OR LAMINATE FLOOR, WE WOULD ADVISE YOU TO TAKE STEPS TO PROTECT YOUR FLOOR FROM POTENTIAL SCRATCHES AND MARKS. THE EASIEST WAY IS TO PLACE PROTECTIVE PADS UNDER THE FEET OF YOUR UPHOLSTERED FURNITURE TO PREVENT MARKS BEING MADE, OR PLACE THE UPHOLSTERED FURNITURE ON TOP OF A PROTECTIVE COVER SUCH AS A RUG. THE MANUFACTURER CANNOT BE HELD RESPONSIBLE FOR DAMAGE SUBSEQUENTLY CAUSED TO YOUR FLOORING BY NOT TAKING THE PREVENTATIVE MEASURES.